


Exposed Portion of Wall Should Have Above Grade Waterproofing To Prevent Water From Entering Through Wall Face or Construction Joints and Traveling Down Behind Paraseal.

Continuous Paratrem Bar Nailed Every 8" O.C. Finish Grade Waterproofing Should Occur at or Below Paraseal Waterproofing.

Paramount Temporary Tape at all Vertical Seams.

Superstop Waterstop. Install 2" In From Outer Face of Wall. (or use Parastop II)

Parastop II Waterstop. Install Against Outer Face of Wall. (or use Superstop)

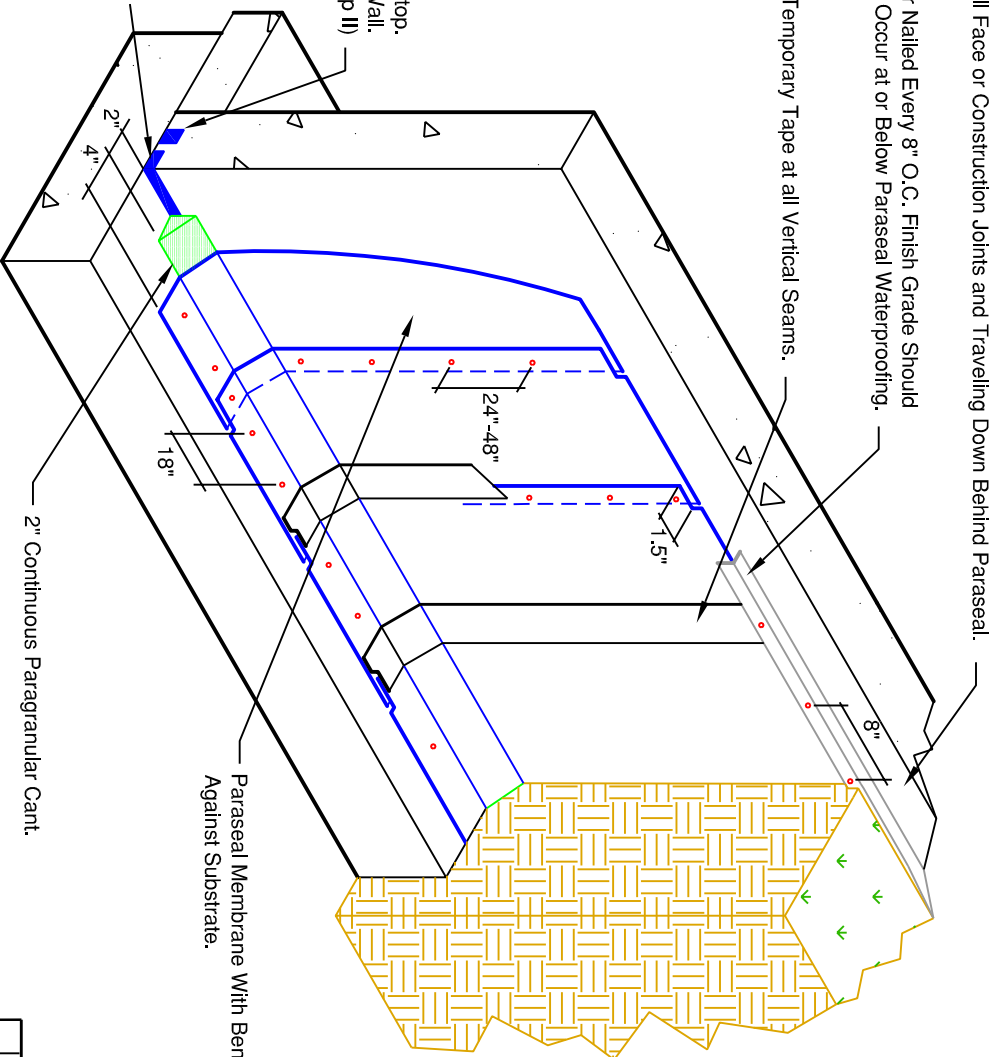

Paraseal Membrane With Bentonite Side Against Substrate.

2" Continuous Paragrander Cant.

Paraseal Installation w/ Seams Running Vertically

No.	Date	Description	By
<b>TREMCO</b> 3735 Green Road Beachwood, Ohio 44122 216-292-5000			
Project: <b>Backfilled Walls</b>			
Drawn by:	Scale:	Date:	Drawing/Index No.
J. Davis	Not To Scale	04/27/01	BFW-01