


Exposed Portion of Wall Should Have Above Grade Waterproofing To Prevent Water From Entering Through Wall Face or Construction Joints and Traveling Down Behind Paraseal.

Continuous Paraterm Bar Nailed Every 8" O.C. Finish Grade Should Cover Paraseal Waterproofing.

Temporary Tape at all Vertical Seams.

Superstop Waterproof. Install 2" In From Outer Face of Wall. (or use Parastop II)

Parastop II Waterproof. Install Against Outer Face of Wall. (or use Superstop)

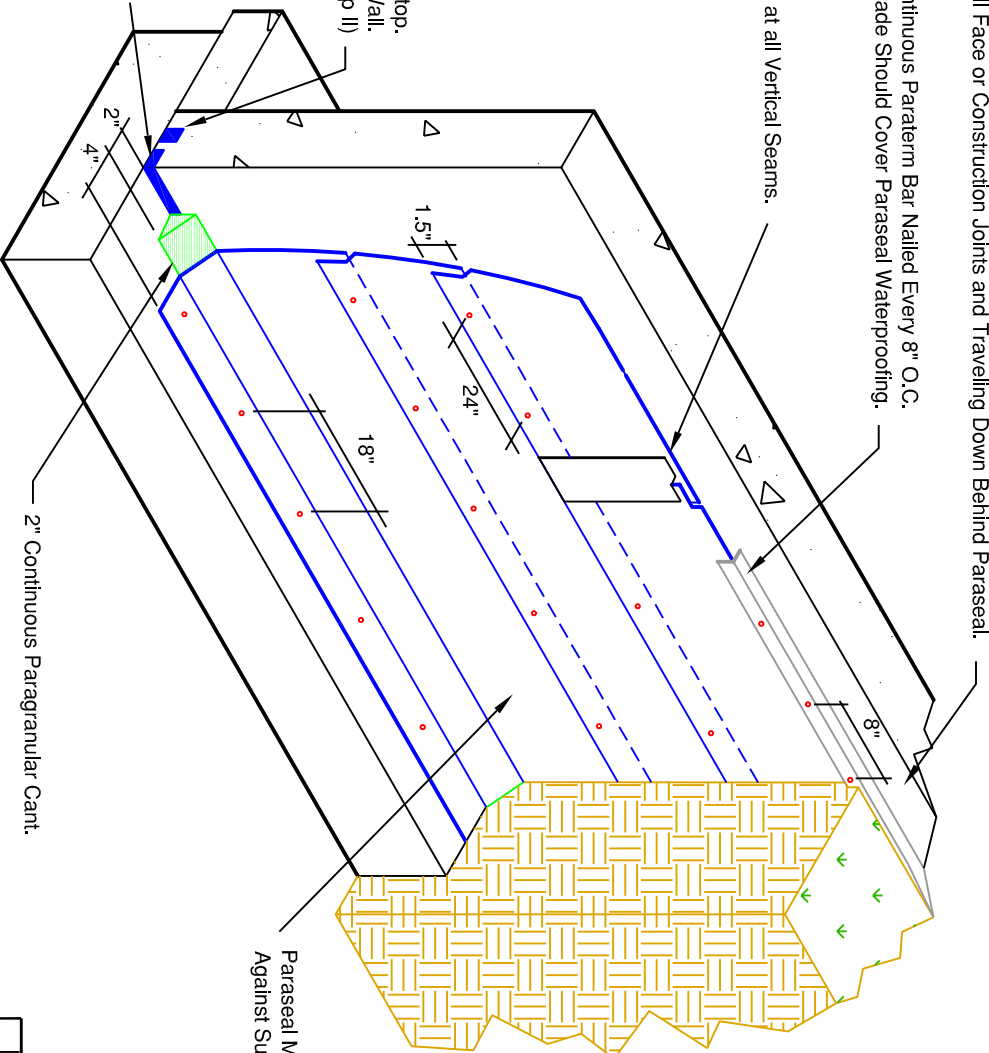

Paraseal Membrane With Bentonite Side Against Substrate.

2" Continuous Paragrander Cant.

Paraseal Installation w/ Seams Running Horizontally

No.	Date	Description	By
TREMCO 3735 Green Road Beachwood, Ohio 44122 216-292-5000			
Project: Backfilled Walls			
Drawn by: J. Davis	Scale: Not To Scale	Date: 04/27/01	Drawing/Index No. BFW-02