

Temporary Termination
Omitted From Drawing
For Clarity (BSW-16).

Poured-In-Place Concrete
Wall. (See BSW-24 When
Wall Is Shotcrete).


When Paraseal LG Is
Installed Against Pile
Fill Each "Crotch" With
Concrete Grout First.

Paraseal LG With
Bentonite Side
Facing Installer. Nail
Seams Every 24" o.c.
and Box Staple Every
3" o.c. (BSW-28)

Note:
When There Is Also Below
Floor and / or Below Footing
Waterproofing See BSW-23
For Proper Tie-In With Wall
Waterproofing. Also See
Section C, "Below
Slab-On-Grade."

All Paraseal LG Seams Lap
4" (Min.) When Wall Is Shotcrete.
(BSW-24)

Paraseal LG Starter Strip Extending 6" Above
Footing or Mat Slab. Bentonite Side Facing
Installer.

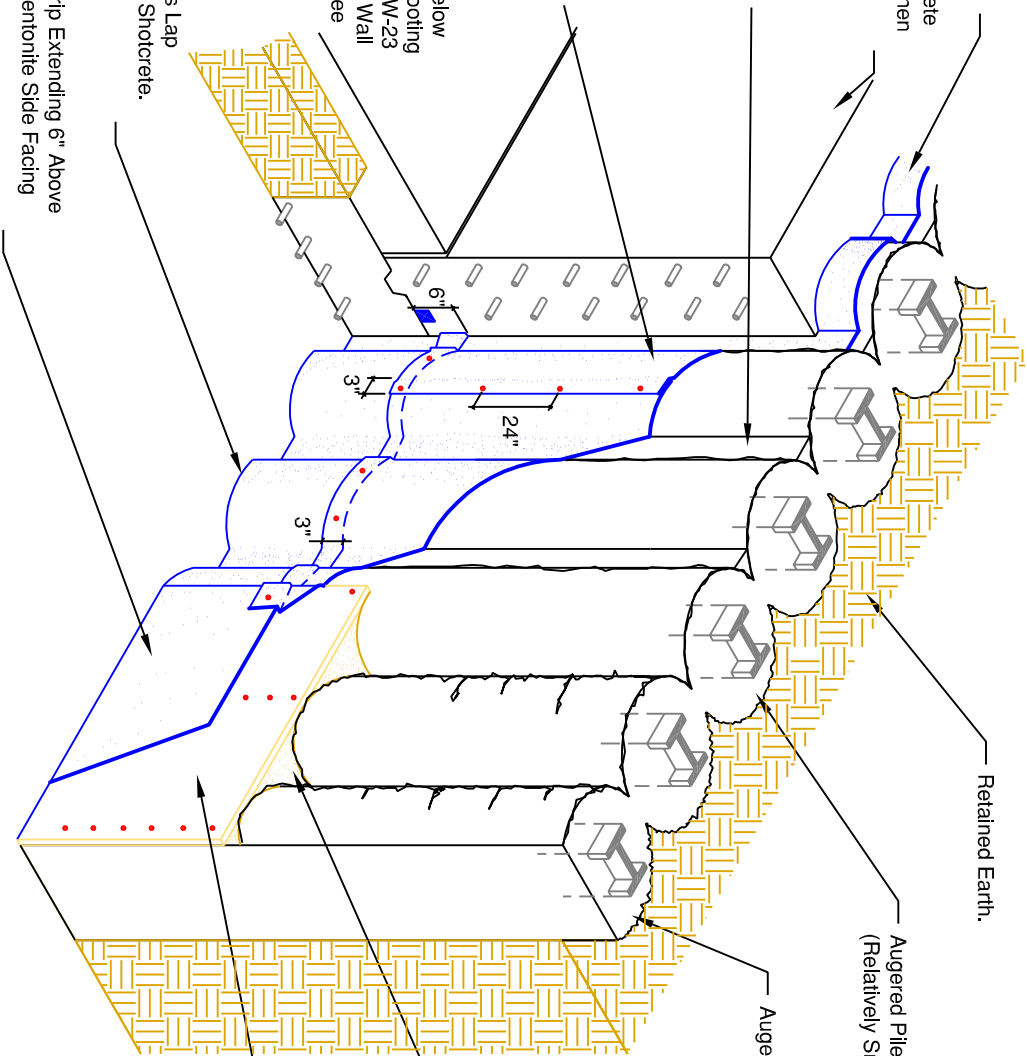

Augered Pile.
(Relatively Smooth)

Augered Pile. (Rough and Irregular)

Optional Technique:
Sand Fill Behind Plywood at
Rough Piles.

3/4" (Min) Plywood at
Rough Piles and Anchored
Every 12" (Max) o.c.

Paraseal LG Installation Over Augered Caisson

No.	Date	Description	By
<p>TREMCO 3735 Green Road Beachwood, Ohio 44122 216-292-5000</p>			
<p>Project: Blindside Walls</p>			
Drawn by:	J. Davis	Scale:	Not To Scale
Date:	06/06/01	Date:	06/06/01
Drawing Index No.	BSW-03		