

Temporary Termination
(BSW-16)


Poured-In-Place Concrete Wall.
(See BSW-24
When Wall is Shotcrete)

Paraseal LG With Bentonite
Side Facing Installer. Nail
Seams Every 24" o.c. and
Box Staple Every 3" o.c.
(BSW-28)

Note:
When There is Also
Below-Floor and/ or
Below-Footing Waterproofing
See BSW-23 For Proper Tie-In
With Waterproofing. Also See
Section C, "Below Slab-On-Grade"

All Paraseal LG Seams Shall
Lap 4" Min. When Concrete Wall
Is Shotcrete (BSW-24)

Paraseal LG Starter Strip Extending
6" Above Footing or Mat Slab. Bentonite
Side Facing Installer.

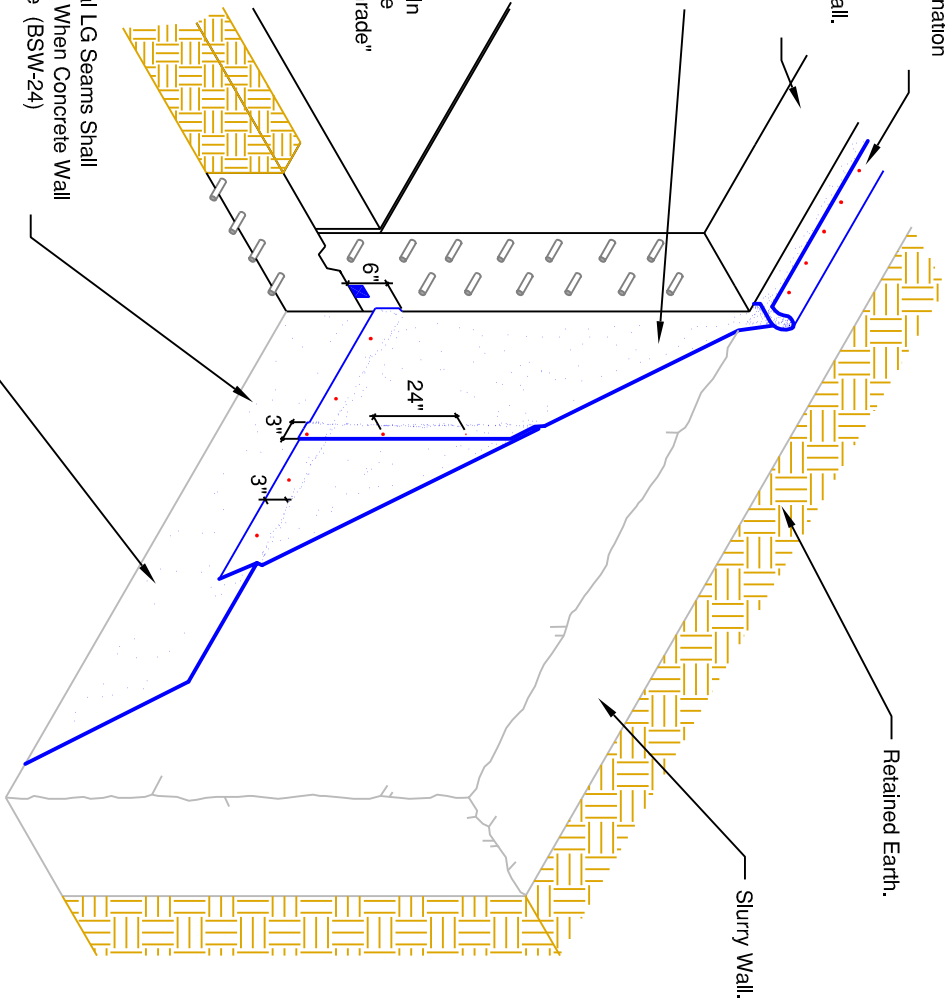

Paraseal LG Installation Over a Slurry Wall

No.	Date	Description	By

TREMCO 3735 Green Road Beachwood, Ohio 44122 216-292-5000

Project: **Blindside Walls**

Drawn by:	J. Davis	Scale:	Not To Scale	Date:	06/08/01	Drawing/Index No.:	BSW-05
-----------	----------	--------	--------------	-------	----------	--------------------	--------