

Temporary Termination  
(BSW-16)


Poured-In-Place Concrete Wall.  
(See BSW-24  
When Wall is Shotcrete)

Paraseal LG With Bentonite  
Side Facing Installer. Nail  
Seams Every 24" o.c. and  
Box Staple Every 3" o.c.  
(BSW-28)

Note:  
When There is Also  
Below-Floor and/or  
Below-Footing Waterproofing  
See BSW-23 For Proper Tie-In  
With Waterproofing. Also See  
Section C, "Below Slab-On-Grade"

All Paraseal LG Seams Shall  
Lap 4" Min. When Concrete Wall  
Is Shotcrete (BSW-24)

Paraseal LG Starter Strip Extending  
6" Above Footing or Mat Slab. Bentonite  
Side Facing Installer.

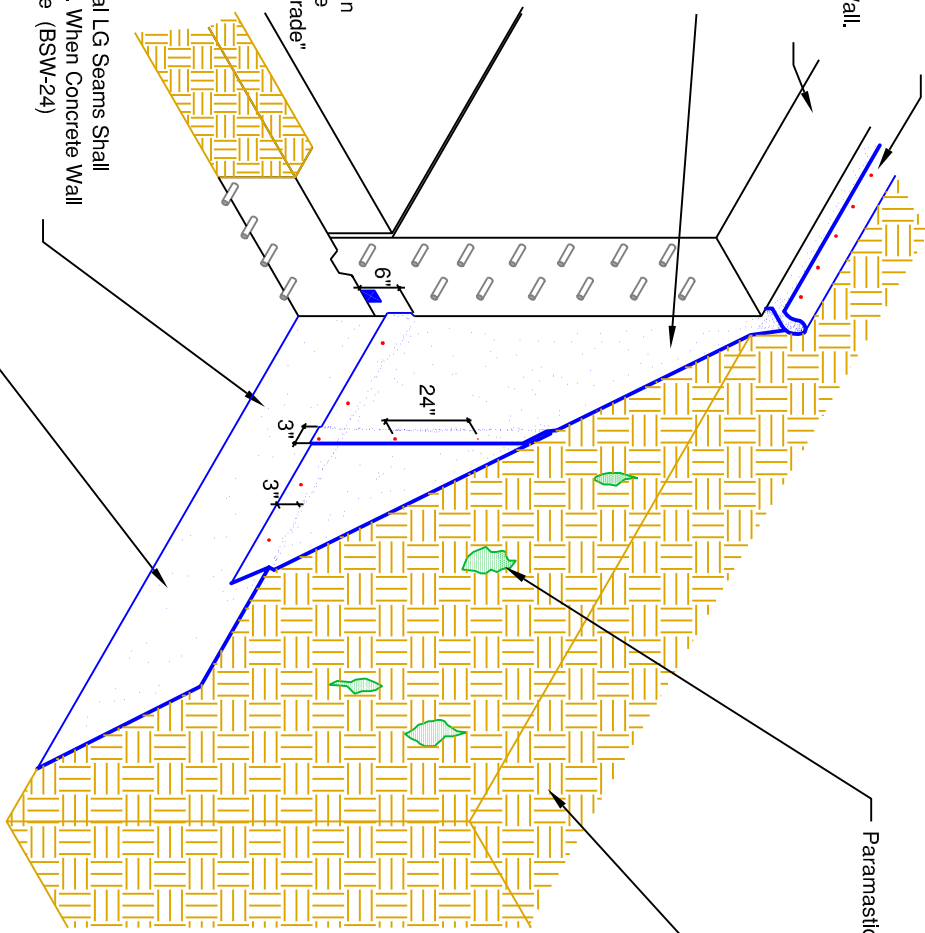

Paramastic Infill, Grout or Vulkem 201 T.

Chemically Stabilized Retained Earth.

Paraseal LG Installation Over Chemically Stabilized Earth.

No.	Date	Description	By
<p><b>TREMCO</b> 3735 Green Road Beachwood, Ohio 44122 216-292-5000</p>			
<p>Project: <b>Blindside Walls</b></p>			
Drawn by:	Scale:	Date:	Drawing Index No.
J. Davis	Not To Scale	06/08/01	BSW-06