


Nail All Vertical and Horizontal Paraseal Seams Every 24" o.c. and Staple Every 3" o.c. Use A Staple Hammer On Wood Lagging And A Box Stapler On All Other Earth Retaining Systems. Air Nailers Are Also Acceptable For Wood Lagging Systems.

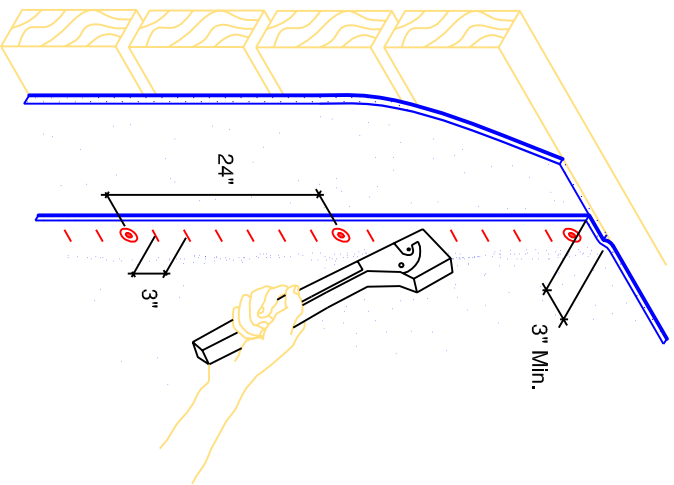

Proper Anchoring of Paraseal Seams.

No.	Date	Description	By
Project: TREMCO 3735 Green Road Beachwood, Ohio 44122 216-292-5000 Blindside Walls			
Drawn by:	Scale:	Date:	Drawing/Index No.
J. Davis	Not To Scale	06/18/01	BSW-28